




# SUMMIT™

**CAR WINDOW MOUNT**



The Summit car window mount shares the same quick-release plate as our popular Vortex Summit SS tripod.

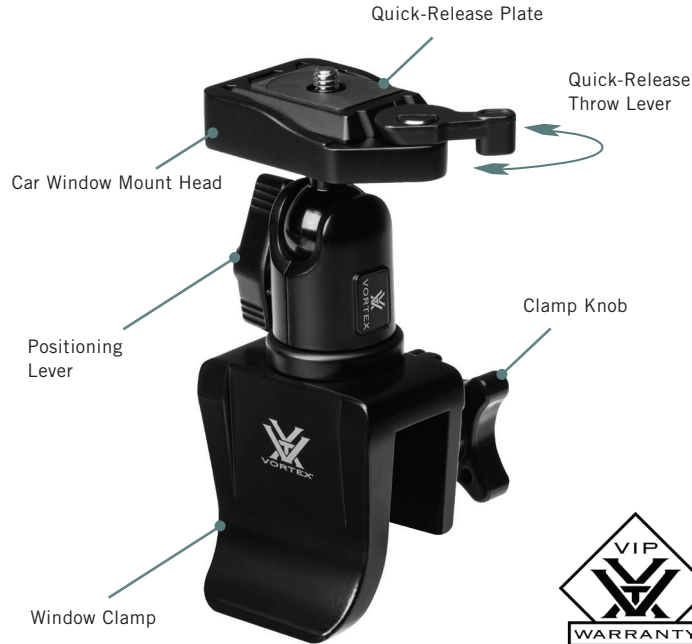

## THE SUMMIT™ CAR WINDOW MOUNT

The Summit™ car window mount features a ball head that is easy to adjust and a quick-release plate for convenient mounting of optics.

### Attach the optic

1. Flip the quick-release throw lever clockwise and remove the plate from the Summit car window mount head.
2. Thread the quick-release plate onto the tripod adapter of the optic.
3. Place the optic in the car window mount head and flip the throw lever counter-clockwise to secure the quick-release plate.



### Adjust the ball head

Attach the Summit car window mount's window clamp over the window pane of your vehicle. Then, adjust the ball head to change the angle of view:



1. Turn the positioning lever counter-clockwise to loosen the ball head.
2. Turn the positioning lever clockwise to lock the ball head in place.

# VORTEX<sup>®</sup>

THE FORCE OF OPTICS<sup>®</sup>

---

#CWM-SS2-12-A